



PERRY EQUIPMENT CORPORATION

AN ISO 9001 COMPANY

SERIES RFF PP FULL FLOW FILTERS

GENERAL DATA

PECO Series RFF filters are designed for the full flow of engine lube oil and may be furnished with or without internal differential relief valve. For engine lube oil filtration, PECO filters normally have internal differential relief valves. Filters should be installed with by-pass and block valves to permit by-passing the filter during element changes if the engine cannot be shut down to allow element changes.

Filters are shipped from the factory complete with initial charge of elements of the proper density for the intended application. REORDER ELEMENTS PER ELEMENT DATA SHEET.

INSTALLATION INSTRUCTIONS

1. Locate the filter in lube oil line between engine lube pump and bearing header as close to the bearing header as possible. Position the filter so that there is at least 38" unobstructed space above the filter for element removal.
2. Connect marked inlet and outlet connections of filter to piping of equal diameter.
3. Open the filter case and inspect it to be sure that all elements are in place and cover gasket is in proper order. Fill filter with oil to the top and close cover down cover securely. Bolt
4. Begin flow of oil to filter. Vent air from case through top vent valve. Carefully check unit for leaks. Vent case at periodic intervals during operation to eliminate accumulated air.

OPERATING INSTRUCTIONS

1. After the filter has reached normal operating temperature, occasionally check differential pressure reading. When it reaches 20 psi at normal operating temperatures, the elements are loaded with contaminants and should be changed.
2. If no noticeable pressure drop occurs in twelve (12) months, the filter should be opened and the elements changed. Some of the products of combustion or other contaminants in the lube oil may have caused element deterioration.
3. Filter elements should be changed regardless of differential pressure if significant quantities of moisture or water are present in the oil.
4. Filter elements should be changed if pressure drop exceeds 50 PSI at any time. This condition may occur on cold start-up.

CHANGING ELEMENTS

1. Stop flow to filter. Bleed off pressure by opening vent valve on top of case.
2. Drain oil to element and lower the gasket seat. Under no circumstances elements to be removed until oil reaches level. this
3. Remove old elements. Care should be taken that none of the contaminant on the outer surface of the old elements is accidentally dropped into the element center post.
4. Install new elements. elements are seated properly. Replace lid and bolt down evenly.
5. Begin flow of oil to filter. Vent air from case through top vent valve. Carefully check unit for leaks. Vent case at periodic intervals during operation to eliminate accumulated air.
6. Proceed to operate filter as described in operating instructions.